

# TV-CODES PER MERK

**Let op:** Als de eerste code niet werkt, ga dan verder met de volgende code bij je tv-merk.

Acer	2536, 1339, 3630, 4293, 4102, 3005, 2182
Aiwa	0701, 1916, 2799, 3376
Akai	2676, 2021, 2106, 3067, 1645, 2410, 0715, 2799, 0714, 1709, 3005, 3434, 2832, 4098, 0037, 1326, 1585, 2197, 2876, 0208, 0606, 1037, 1308, 1652, 1727, 1770, 3611
Audiosonic	0037, 0714, 2106, 3067, 0009, 0865, 1308
Bang & Olufsen	0620
Beko	0714, 1652, 2125, 2164, 1308, 0715, 2200, 0037, 1545, 0808, 3067, 1585, 3262
BenQ	4393, 2807, 2214, 1645
Blaupunkt	2106, 0195
Daewoo	0634, 2266, 0661, 2275, 1080, 1376, 0880, 1812, 0037, 1506, 3192, 0009, 0451, 0876, 1196, 2098, 2410, 2673, 0865, 1606, 1770, 1849, 2106, 2125, 2333
Finlux	2676, 1585, 0714, 0037, 0808, 1556, 0715, 1248, 1506
Fujitsu Siemens	1298, 1666, 2676, 0808, 1248
Grundig	2125, 1223, 2890, 0195, 1582, 3262, 1308, 1645, 0443, 3067, 1324, 2676, 1506, 2053, 2000, 2200, 0587, 0706, 2007, 0037, 1376, 1916, 1954, 2561
Haier	2182, 2214, 2134, 2876, 3296, 1983, 1615, 2449, 2051, 0178, 2204, 2212, 0698, 0876, 1326, 1825, 1849, 2106
Hitachi	2676, 2431, 2207, 1484, 1576, 1585, 0744, 1037, 4225, 0634, 2214, 1080, 2005, 1645, 2000, 1145, 0037, 0679, 2799
Humax	1295
Hyundai	1532, 2449, 0876, 1468, 2676, 0865, 2154, 1376, 1606, 1694, 3434, 1326, 2414, 3067, 3376, 3528, 4098, 1585, 1682, 1770, 2053
JVC	2118, 0653, 1653, 1774, 2676, 3432, 2000, 2005, 2714, 3296, 0606, 3047, 0683, 1659, 4501, 0093, 1636
Lenco	2090, 2799, 3964, 1849, 2947, 0587, 1787, 1812, 1983, 2106, 2155
LG	2182, 0178, 1637, 0714, 0037, 1768, 1652, 0715, 2676, 4115, 0698, 1506, 1413, 2800
Loewe	0512, 1884, 1836, 0633, 2216
Medion	2676, 3067, 0808, 1248, 0714, 2106, 1037, 2947, 3049, 1585, 0668, 0880, 1645, 2001, 1849, 1376, 1556, 2214, 0698, 1308, 2386
Mitsubishi	0108, 0512, 1797, 1037, 1506, 0037

Nokia	0606
Orion	2000, 2005, 3964, 2007, 2676, 2108, 0037, 0443, 0714, 1196, 1506, 1916, 0880, 1507, 1652, 1037, 2001, 2561, 3510, 0808, 1614, 1954, 1983, 2449, 3296
Panasonic	1636, 1650, 0250, 0226, 4501, 2676, 0853, 2800
Philips	2800, 1506, 2680, 2660, 0037, 3678, 2638, 2665, 2214, 2015, 2118
Pioneer	1457, 0679, 2843, 2458, 0037, 1636
ProLine	2676, 0634, 1585, 3434, 0625, 1545, 1727, 2393, 0037, 1037, 1376, 1709, 1982, 2106
Prosonic	2106, 1849, 1770, 2676, 3005, 0714, 2125, 1376, 3480, 0880, 2001, 1196, 1314, 1585, 3296, 0606, 0876, 2197, 2561, 3510, 1308, 1324, 1545, 1645, 1709, 1787, 2021, 2090
Protech	0037, 0668, 0009, 1037
Salora	2676, 2197, 3067, 2154, 1556, 2001, 2106, 2125
Samsung	2051, 0618, 3958, 0587, 0814, 0037, 1235, 0009, 1506
Sanyo	1208, 1585, 0208, 3096, 2676, 1649, 1142, 0154, 1636, 2461, 0170, 1037, 1507
Sharp	1659, 2360, 2676, 0093, 2214, 2000
Siemens	0195, 0037
Siera	1506
SilverCrest	2676, 1037
Sony	1825, 0505
TCL	3047, 2675, 3183, 0706, 3426
Telefunken	2676, 0625, 1585, 0560, 3067, 0714, 0808, 1556, 1588, 2799
Thomson	0625, 0560, 3047, 2675, 1588, 3376, 3183
Toshiba	1508, 2598, 2676, 2732, 1356, 0714, 1582, 0618, 0767, 1652, 1916, 2108, 1037, 1636, 2000, 0195
Vestel	2676, 1585, 1037